

R-BOX-IP64 Installation Guide

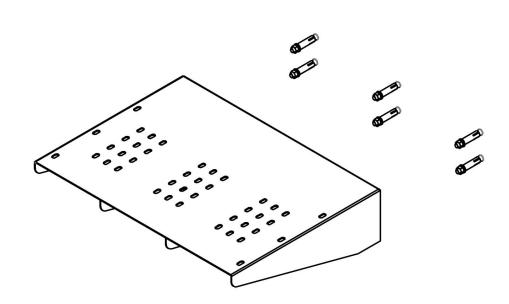




- 1 Fix the base onto the wall with 6 expansion bolts
- 2 Connect main cabinet to the baseand fastern with 6 screws




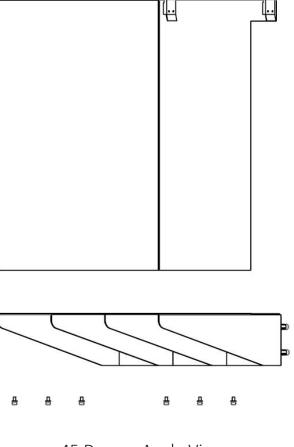


45 Degree Angle View

3 Assembling Batteries into Cabinet

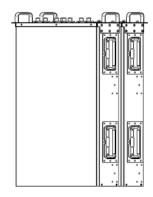


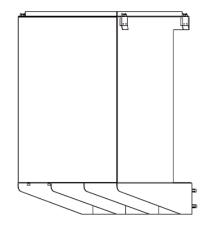

4 System Cabling

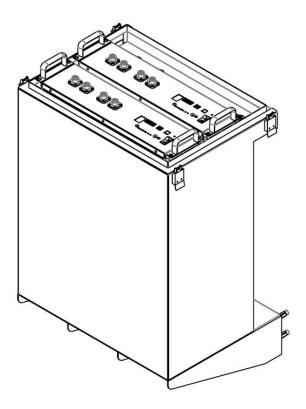

Assemble the upper cover and fix to cabinet with clips

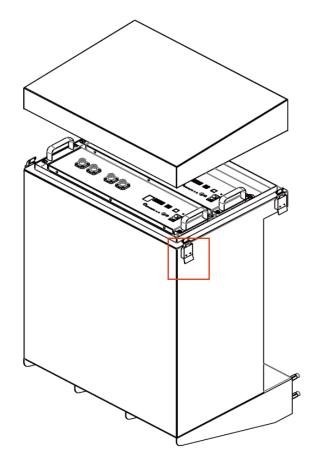

6 Finish

