

Installation and Configuration Manual With Growatt SPH_10000TL-HU

Pytes Lithium Battery 48V/51.2V Low Voltage Batteries

With Growatt SPH_10000TL-HU



BOM LIST



Before installation, you should prepare following items.

Item	Remarks	Quantity
Power Cable (DC)	<input type="checkbox"/> Conductor cross-section: 50 mm ² to 95 mm ² <input type="checkbox"/> Cable diameters: 14 mm to 25 mm <input type="checkbox"/> Only copper cables may be used. <input type="checkbox"/> The DC cables must be sized for the maximum battery voltage and the maximum battery current (see battery manufacturer documentation).	Depends on the number of batteries and the connection method
Com. Cable	CAN communication or RS485 communication	1
Battery	48100R series /V5°/4850	Depends on the number of batteries and the connection method
Inverter	Growatt SPH_10000TL-HU	1



Definition of RJ45 Port Pin for BMS is as follow.

Click [here](#) to tell the version of 48100R you have.


CAN port definition

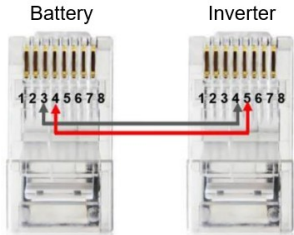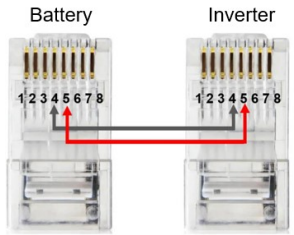Version of 48100R	Pin number of com. cable
A version	
B and C version	

RS485 port definition

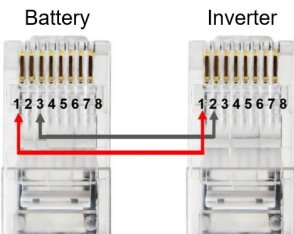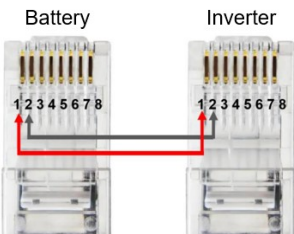Version of 48100R	Pin number of com. cable
A version	
B and C version	

HOW TO INSATLL

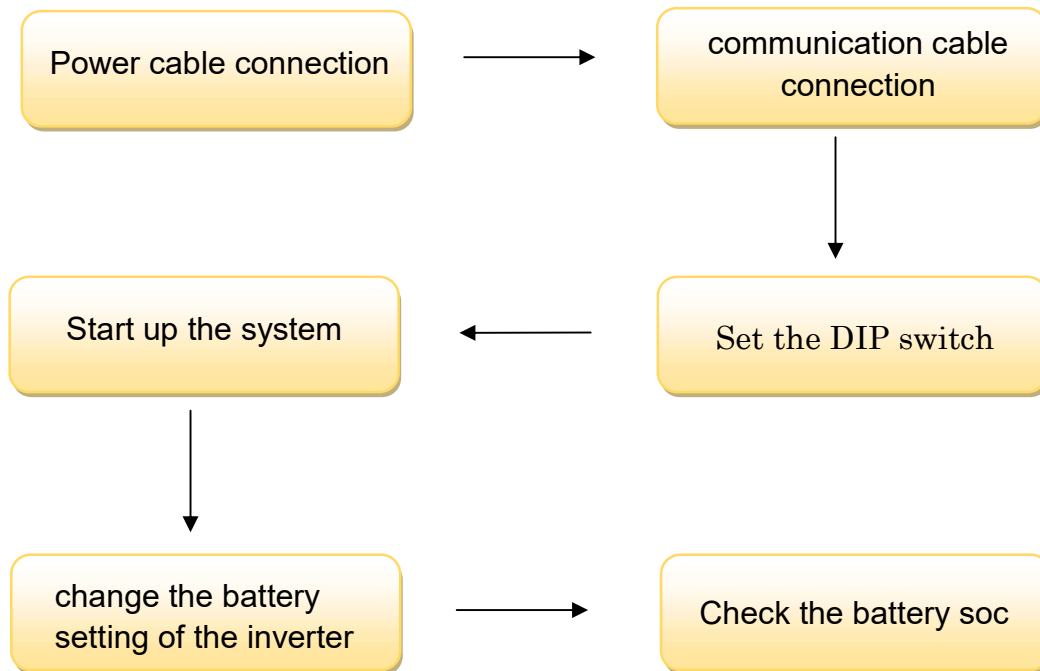

CAUTION: If you want to get more inverter-related settings, please refer to the inverter user manual first.


1. Power Cable Connection

Step.1

Open the front housing of the Growatt SPH_10000TL-HU.

Step.2

Connect the red and black cables to the inverter DC connector as shown in Pic 1.1.1.

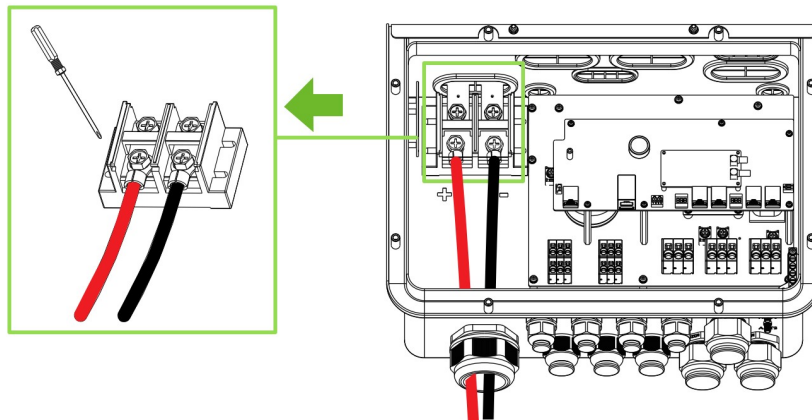

Pic 1.1.1

Step.3


At the other end of the cable, connect to the battery as shown Pic 1.1.2. (Ensure that the battery power switch is off)



Pic 1.1.2


2. Communication Cable Connection

Connect the end of the cable to the inverter communication port as shown in pic 1.2.1. Make sure which communication port to use.

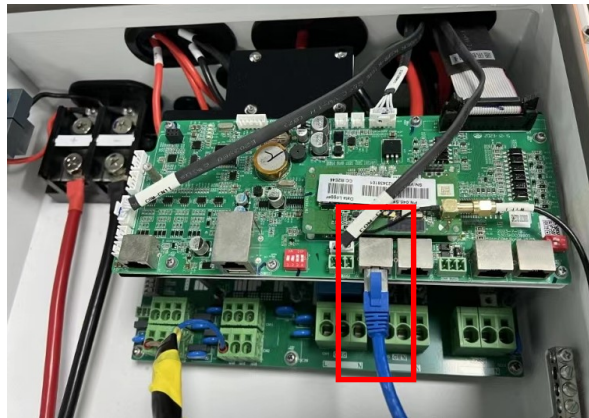

Pic 1.2.1



The battery supports both CAN and RS485 protocol. Choose one port shown in pic 1.2.1 and using the corresponding port.(Ensure the correct sequence of communication cable)

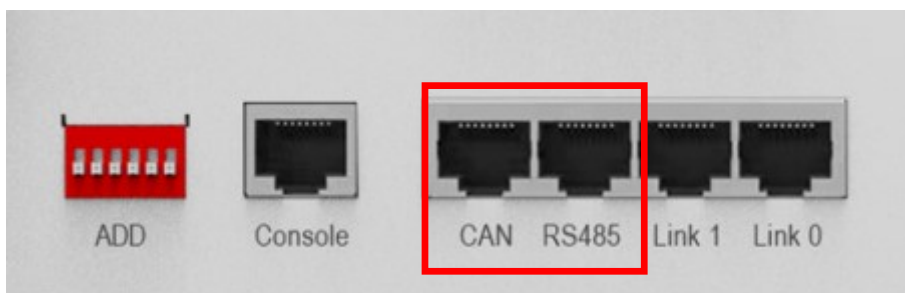

Pic 1.2.2

3. Set The DIP Switch

Set the DIP switch as shown in Pic 1.2.3.

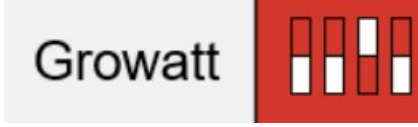Version of 48100R	ADD setting
A and B version	
C version	

Pic 1.2.3

4. Start up the system


Start up the inverters and batteries.

5. Change the battery setting of the inverter


※ **CAUTION:** If you want more details about the batteries settings, please check the operating manual of inverters.

Step1.

Change the battery type to lithium in the Battery setting.

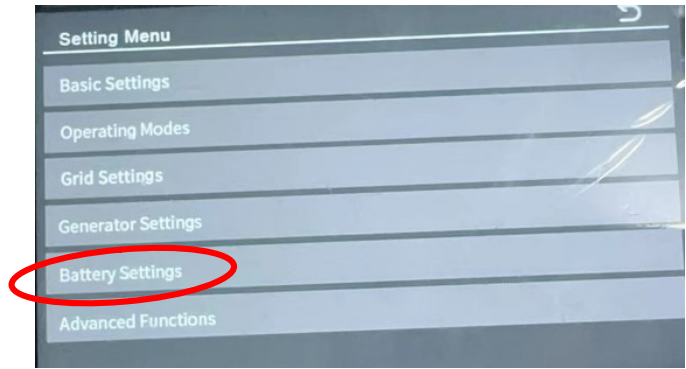


Pic 2.2.1

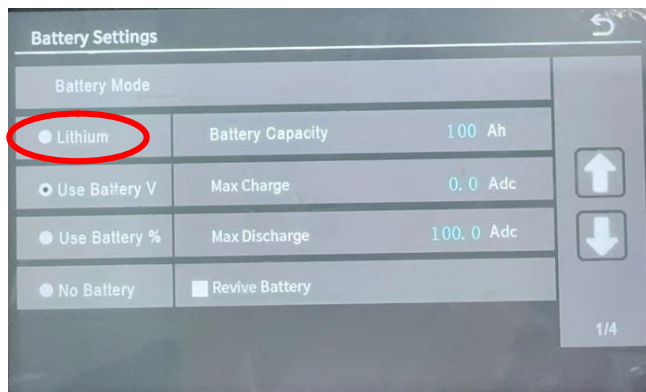

Pic 2.2.2

Step2.


Turn to the 3/4 page, set the lithium mode to 00 if you use RS485 communication. If you use CAN communication, set the lithium mode to 01.

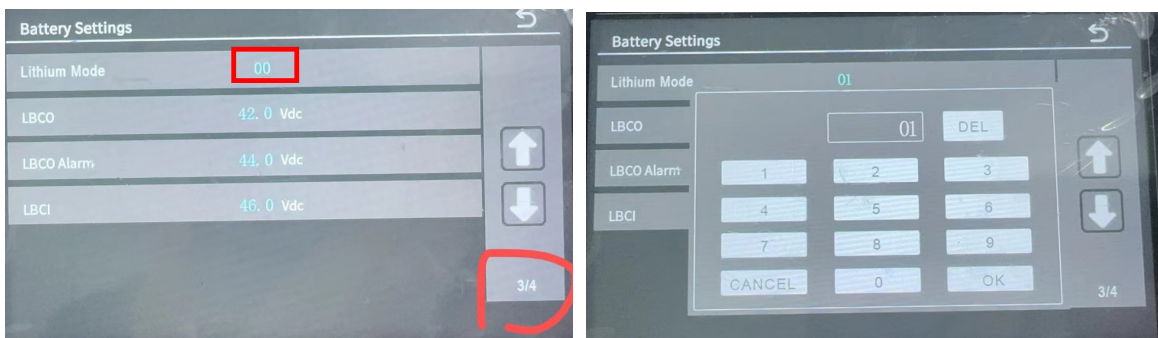

Pic 2.2.4


6. Check the battery soc

Touch the battery icon of the inverter's touch panel.

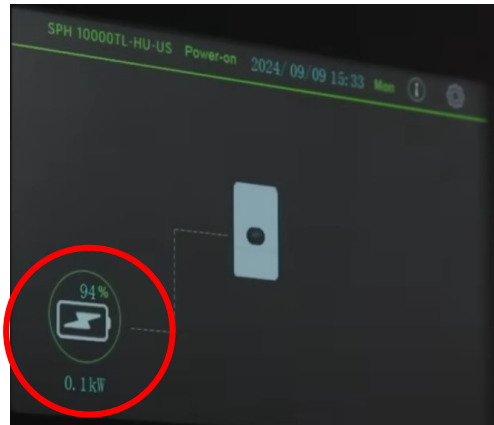

Pic 3.1.1

The details of the battery will be shown on the parameter if the connection between battery and inverter is correct.

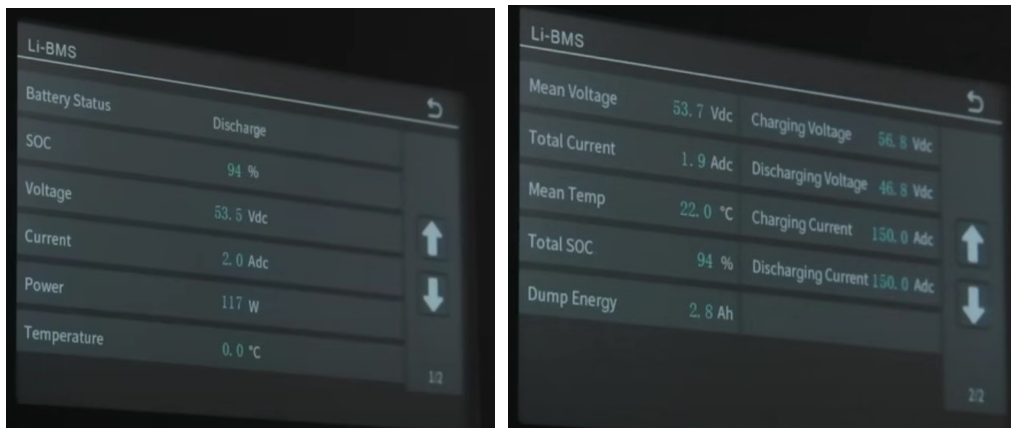

Pic 3.1.2

Please refer to the [Growatt inverter manual](#) for more settings.